

 
HomeEasy Remote Control Outdoor Wall Switch

RE-INVENTING THE HOME

V1.0

The HE-401 and HE-402 Remote Control Outdoor wall switches are expansion units for the HomeEasy range of products and designed to work with all the HomeEasy receiver sockets and modules.


Additional HomeEasy receiver products are required for the HE-401/HE-402 to work.

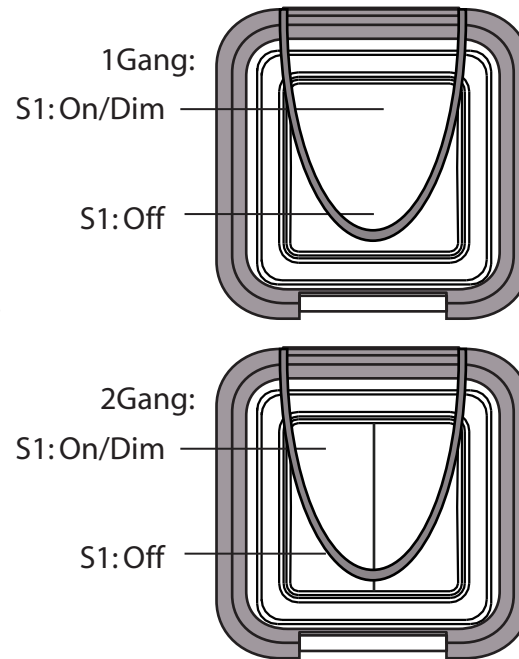

Switch Installation:

Remove the switch unit from the protective casing, attach the casing to the wall using the screws and wall plugs provided.

Reinsert the switch unit into the protective casing making sure the unit is the correct way up.

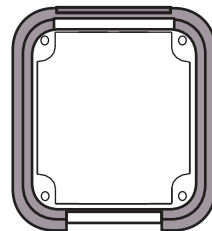


WARNING: attaching the outdoor switch to a metallic surface will reduce the operating distance.

Product Operation:

Pairing/Deleting with Remote Control:

Up to Six remote controls can be paired with each Receiver Socket or Module. To pair the switch and socket together, press the "Learn" button. The LED will start to flash, now press the selected "On" button on the remote control, the LED will stop flashing. The units are now paired together, you can test this by pressing the selected "On/Off" button.

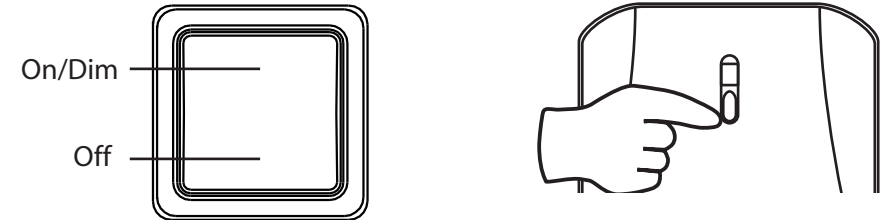

Always refer to the original instruction when using with additional products

Deleting Remote Control:

To delete a remote control that has been paired with a HomeEasy Receiver socket or module, simply press the "Learn" button. The LED will start to blink; press the "Off" button on the remote control, the LED will blink twice to confirm that the remote control has been removed from the receiver sockets memory.

Remote Socket reset:



To delete all the remote control units from the memory of the Receiver Socket or module, hold the "Learn" button for more than 6 seconds, the LED will start to blink continuously. Press the learn button again, the LED will blink twice to confirm the deletion of all remote controls from the receiver memory.

Dimming: (Compatible Receivers Only)

To dim a compatible receiver socket or module, switch the receiver on using "On" button and then press "On" again. The unit will now start to dim, to select the required level press "On" again.

Changing Battery:

Remove the switch unit from the protective casing, using a small screwdriver to unclip the front cover from the wall switch unit.

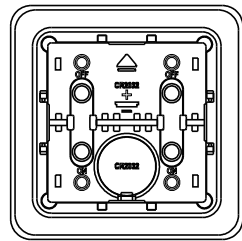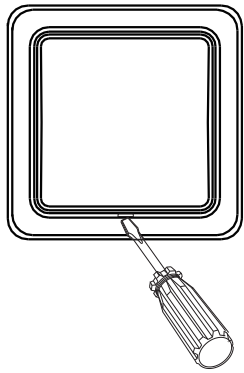

Replace the battery with a new CR2032 battery (Byron SX100), making sure the polarity is correct, then replace the front cover.

Product Specification:

Remote Control: HE401/402

Battery: 3v Cr2032

Range: 30 Metres (Open Distance)

Frequency: 433.92MHz

Warning: *Never Exceed the Product Specification*

Product Compatibility:

The HE-401/402 outdoor wall switch is compatible with all HomeEasy products

Contact:

C H Byron
34, Sherwood Rd
Aston Fields
Bromsgrove
B60 3DR

Helpline: 0845 2301 231

Tel: 0845 2301231
Fax: 01527 550001
Web: www.chbyron.com
E-mail: support@chbyron.com

Byron		433MHz	
R&TTE APPROVED		CE 0560	
A	UK	M	
B	IRL	BG	N
DK	L	CZ	SK
FIN	NL	EST	SLO
F	P	H	CH
D	E	IS	PL
GR	S	LV	RO
LT			

CH Byron Electrical United Kingdom. www.chbyron.com